



Spring type PRV (could be dead weight, can't be cleaned by spray head

External CIP valve for Anti-vac valve & gas line

If anti-vac valve is cleaned, CIP sprays out causing H&S issues and

Dead-weight anti-vac has large flat plate to collect dust & debris – all sucked into the tank when valve activates

> CIP feed & gas recovery

Vacuum valve uses combined dust cover and drip collected to protect vessel and contents from dust ingress

Cleaning the pressure relief valve valve



Cleaning the vacuum valve

Tank CIP connection

Cleaning sensor